



Model 75056
 For 1 player / Ages 4 and up
INSTRUCTION MANUAL
 Rev.A

CUPCAKES TEA PARTY CAKE

Cupcakeland is a magical charming place that is filled with sweet friendships and lots of fun. Each Cupcake has a sweet scent, just like their name and personality. You also get a DVD to show you all about Cupcakeland and our friends.

Tea Party Cake changes from a cake into a tea party. Your Cupcake can host a party for her friends. It comes complete with a table and parasol, working tea pot and sugar bowl sounds, cake and ice cream, party accessories for your Cupcake and friends and music and lights for you to drink tea to.

CONTENTS:

- Tea Party Table & Parasol / Cake
- 2 seats
- 1 Tea Pot
- 1 Sugar Bowl
- 2 Plates
- 2 Cups
- 1 Tray
- 2 Cake and Ice Cream
- 1 Cake Slice
- 3 Gingerbread Man Cookies
- 2 Placemats
- 2 Napkins
- 4 Presents
- 1 Bunch of Balloons
- Cupcakeland DVD


TEA PARTY:

Remove the Tea Pot to hear the tea being poured. Place back on the warming plate to turn off. Note: Will turn off automatically if not replaced.

When the parasol is lifted, lights and music will turn on.

Remove the Sugar Bowl to hear the sugar being poured. Place back on the sugar plate to turn off. Note: Will turn off automatically if not replaced.

A seat for your Cupcake.

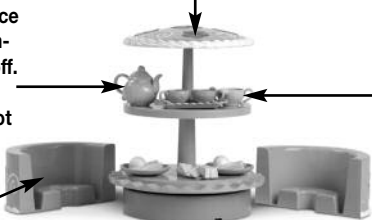

TO CHANGE CAKE INTO TEA PARTY:

1. Lift the top of the cake upwards and music and lights will turn on. This is now your parasol and tea party table.
2. Pull the sides of the cake out, to create seats for your Cupcake and her friends.



TO MAKE CAKE:

1. Put seats back onto the side of the table.
2. Push the parasol top down until it fastens with the sides of the cake.



COLLECT ALL 6 CUPCAKES AND ICE CREAM SUNDAE VANITY FOR MORE CUPCAKELAND FUN!!!



Ice Cream Sundae Vanity

BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.

MAINTENANCE

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.

- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed by:
RADICA UK Ltd.
 The Old Stables, Munns Farm,
 Cole Green, Hertfordshire,
 SG14 2NL, England



PLEASE RECYCLE



RADICA:®
 CUPCAKES IS A TRADEMARK
 OF RADICA GAMES LTD.
 © 2005 RADICA GAMES LTD.
 PRODUCT SHAPETM
 ALL RIGHTS RESERVED